Mounting Guide

HYDROSCRUB P300 P + H

NOZZLES HydroScrub P300

Mounting Instruction – Nozzles

Before start: 2 nozzles must be mounted at the rotating arm.

Contents

 Number of Nozzles + size
 Spare part No's

 2 x Nozzle .0165
 Item No. 102802851

 1 x Nozzle .0200
 Item No. 102802852

 1 x Nozzle .0245
 Item No. 102802853

 2 x Nozzle .0285
 Item No. 102802854

Using 2 of the above nozzles must give a same pressure as the standard nozzle. Check size of standard nozzle; in manual, catalogue, or look at the type plate or look at the standard lance.

Example: If standard nozzle on HPW is .0475 – the 2 nozzles mounted at the HydroScrub P300 (P or H) must be: $1 \times .0200 + 1 \times .0285$ nozzle = \longrightarrow .0475

Range of Nozzles add's up to: Same as 1 x standard nozzle.


Standard Nozzle	Nozzle 1	Nozzle 2
.0275 =	.0165 +	.0165
.0300 =	.0165 +	.0165
.0340 =	.0165 +	.0200
.0350 =	.0165 +	.0200
.0370 =	.0165 +	.0200
.0400 =	.0165 +	.0245
.0435 =	.0200 +	.0245
.0450 =	.0200 +	.0245
.0500 =	.0245 +	.0285
.0530 =	.0245 +	.0285
.0550 =	.0285 +	.0285




ASSEMBLING INSTRUCTION HydroScrub P300 P + H



B) HydroScrub P300 P + H

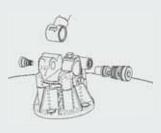

 C) HydroScrub P 300 H with side handle, - Hand-held model



D) Nozzles

- Nozzle angles must follow rotating arm



E) Nozzle angle

